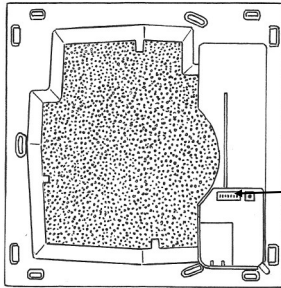


Über die DIP-Schalter auf der Steuerplatine haben Sie die Möglichkeit eine Vielzahl von Lüfterfunktionen einzustellen! Jeder der weißen Schalter hat **drei** Einstellmöglichkeiten!



Achtung! Schalter nur in spannungsfreiem Zustand des Lüftungsgerätes verstellen!



Werkseinstellung:

Grundlüftung: AUS
 Nennlaststufe: 90 m³/h
 Intervall: AUS
 Nachlaufzeit: AUS
 Einschaltverzögerung: AUS

 









weißer Schalter





 
 
 
 

Änderung der Einstellungen:

1. Designblende abnehmen
2. Gewünschte Einstellungen vornehmen
3. Wiedermontage in umgekehrter Reihenfolge

 
 





 
 
Grundlüftung

0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	

Zeitfunktionen

Intervall AUS	
Intervall EIN* Lüfter läuft alle 4 Std. für 30 min	
Intervall EIN* Lüfter läuft alle 2 Std. für 15 min	
Nachlaufzeit AUS	
Nachlaufzeit EIN* Lüfter läuft 15 min nach	
Nachlaufzeit EIN* Lüfter läuft 30 min nach	
Einschaltverzögerung AUS	
Einschaltverzögerung 120 s	
Einschaltverzögerung 45 s	

Bedarfslüftung

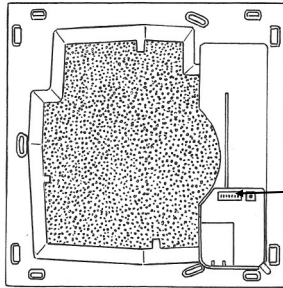
0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	
90 m³/h	

* Die Zeitfunktionen Intervallbetrieb und Nachlaufzeit werden immer auf der eingestellten Bedarfslüftungsstufe ausgeführt (DIP Schalter 6 und 7)

You have the option of setting a variety of fan functions via the DIP switches on the control board!
Each of the white switches has three setting options!



Attention! Adjust the switch only when the ventilation unit is voltage-free!



Factory setting:

Basic ventilation:	OFF
Nominal load stage:	90 m³/h
Interval:	OFF
Run-on time:	OFF
Switch-on delay:	OFF



White Switch

Changing the settings:

1. Remove the design screen
2. Make the desired settings
3. Remount in reverse order

Basic Ventilation

0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	

Time Functions

Interval OFF	
Interval ON* Fan runs every 4 hrs. for 30 min	
Interval ON* Fan runs every 2 hrs. for 15 min	
Run-on time OFF	
Run-on time ON* Fan runs on for 15 min	
Run-on time ON* Fan runs on for 30 min	
Switch-on delay OFF	
Switch-on delay 120 s	
Switch-on delay 45 s	

Regulated Ventilation

0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	
90 m³/h	

* The time functions Interval operation and Run-on time are always carried out at the set regulated ventilation level (DIP switches 6 and 7).